

Zybox

pressure sprayer

To prepare for use

Screw the spray lance to the trigger control valve.

Remove the pump unit for filling.

Fill the tank with water to indicated line, fill with Zybox to top line.

For easier pumping, use full strokes of the pump.

General Hints

The sprayer can be carried by the pump handle or by using the strap.

A slight pressure on the trigger opens the valve. When the trigger is released the spray stops immediately.

Maintenance

When the sprayer is not in use, do not screw down the pump unit too tightly.

Brass parts can be affected by frost, keep sprayer in a frost-free place in winter.

To reach the pump washer, remove the two screws at the top of the pump.

The pump washer should be greased regularly.

If the sprayer is still under pressure, pull on the pressure release valve on top of the tank.

It is important to clean the sprayer out after use, particularly when not using it for an extended time.

For repairs or spare parts, please contact us.

Part No 883 Trigger Release Valve Part No 858 Spray Lance Part No 3 Brass Angle Bend ZPS-5-3 Part No 1 Nozzle Cap ZPS-5-1
Part No 2 Nozzle Rotor ZPS-5-2

Customer Helpline 0800 197 2882